

Service Interval Hours

Whether you cut, haul, clear, plant or all of them, you have a world class level of support as your partner.

Like no other warranty in the industry:

- Comprehensive servicing and maintenance
- Fully Fendt trained and equipped service technicians
- High-quality parts
- Expert diagnostics
- No additional cost (\$15,000 value)

Fendt Owner Advantage:

- Highest level of operating reliability
- Optimal retention of value
- Controlled costs from the beginning of your purchase
- Better cost of ownership

Peace of mind that's can't be beat. All from one trusted source.



	50	500	1000	1500	2000	2500	3000
ENGINE							
Perform stationary regeneration of DPF		X	X	X	X	X	X
Drain plug gasket	X	X	X	X	X	X	X
Replace engine oil/filter	X	X	X	X	X	X	X
Replace fuel filter			X		X		X
Drain/Replace fuel pre-filter	X	X		X		X	
Replace fuel pre-filter			X		X		X
Change the DEF (AdBlue) breather					X		
Change the DEF (AdBlue) filter		X	X	X	X	X	X
Check air filter maintenance code	X	X	X	X	X	X	X
Check air filter suction lines for leaks	X	X	X	X	X	X	X
Replace engine air pri/sec filter					X		
Check and clean cooling radiators	X	X	X	X	X	X	X
Check coolant level	X	X	X	X		X	X
Check cooling system for leaks	X	X	X	X	X	X	X
Replace coolant					X		
Check engine belts	X	X	X	X	X	X	X
Check valve clearance					X		
TRANSMISSION							
Change transmission oil					X		X
Drain plug (brake)					X		X
Drain plug gasket (trans)					X		X
Replace transmission pressure filter	X		X		X		X
O-ring - filter	X		X		X		X
Change transmission suction filter					X		X
O-ring - suction filter					X		X
Check fluid level in transmission	X	X	X	X	X	X	X
Check oil level in rear final drives	X		X	X		X	X
Change oil in rear final drives		X			X		
Drain & fill plugs gasket		X			X		
Check oil level in front PTO	X		X	X		X	X
Change oil/filter in front PTO		X			X		
Filter o-ring for front PTO		X			X		
FRONT AXLE							
Check the hydraulic oil level	X	X	X	X		X	X
Change hydraulic oil					X		
Drain plug o-ring					X		
Change return line filter					X		
Change vent filter					X		
Change control pressure fine filter					X		
Clean the external pressure supply sieve filter							
Drain oil from couplers recovery bottles	X	X	X	X	X	X	X
COMPRESSED AIR SYSTEM							
Operate tank drain valve	X	X	X	X	X	X	X
Check antifreeze level	X	X	X	X	X	X	X
Replace the air drier cartridge			X		X		X
Compressed air function test	X	X	X	X	X	X	X
ELECTRICAL SYSTEM							
Check lighting and signaling system and all monitoring and warning systems for correct operation	X	X	X	X	X	X	X
Check software version and update	X	X	X	X	X	X	X
Check battery acid level		X	X	X	X	X	X
Read out and record diagnostic memory and remedy faults	X	X	X	X	X	X	X
OVERALL MAINTENANCE							
Tighten wheel hardware to specifications	X	X	X	X	X	X	X
Check for loose hardware and linkages and check for leaks	X	X	X	X	X	X	X
Cleaning of tractor, check	X	X	X	X	X	X	X
Cleaning of tractor, Vario Terminal	X	X	X	X	X	X	X
Clean the cab's air spring bellows	X	X	X	X	X	X	X
Check tire pressure	X	X	X	X	X	X	X
Lubricate all grease points	X	X	X	X	X	X	X
Test drive for functions and braking	X	X	X	X	X	X	X
Check brake control	X	X	X	X	X	X	X
Check electro-hydraulic steering	X	X	X	X	X	X	X